



P200 software update

Rev. 01-24-2017

1. Have a USB flash memory ready.
2. Download and unzip the file "SW Update".
3. Copy the folder "SW Update" to the root directory of the USB flash memory.
4. Turn on the system, insert USB flash memory to the USB port and select "System" – "About" – "Check for update".

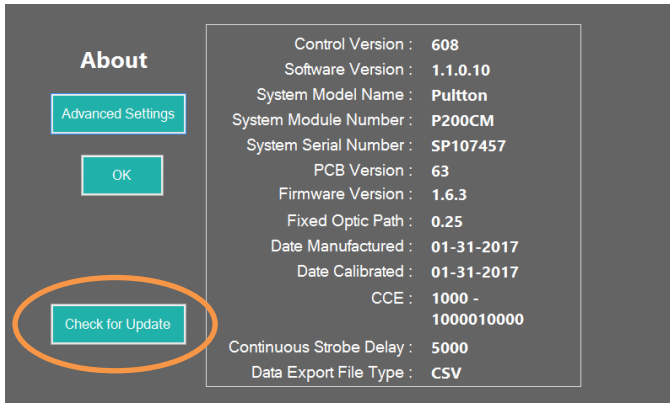

5. If the version No. in the USB flash memory (Location: USB) is higher than "Current Version", the "Update" button appears.

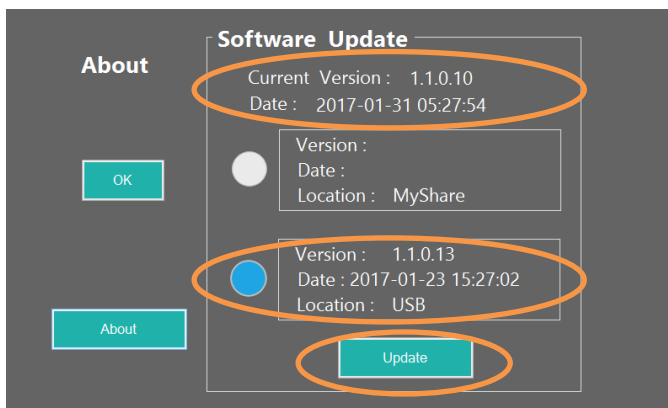

6. Press "Update", the system will complete automatically the update and restart after finish.
7. Export file location:

System:

D:\MyShare\Export Data\your file name (table file).

D:\MyShare\Export Curve\your file name (curve file).

USB flash memory:

Export Data\your file name (table file).

Export Curve\your file name (curve file).